

# Autogas Vehicle Refuelling Instructions

When pulling up to the autogas dispenser, please apply the hand brake and switch off the engine. No smoking, naked flames or mobile phones are allowed on the Service Station Forecourt.

## FILLING NOZZLES

There are two types of filling nozzles commonly used on the forecourt sites.

1. **Gasguard™** Filling Nozzle
2. **De Visser™** Filling Nozzle

Both types of filling nozzle use the Bayonet connection, which should connect directly onto the vehicle filler point.

### IMPORTANT SAFETY NOTICE

**The use of adaptors is not recommended. Refilling of Portable LPG Cylinders is not permitted.**

## GASGUARD™ NOZZLE FILLING INSTRUCTIONS

Ensure **Gasguard™** nozzles are fitted with protective nozzle shields. Report to site staff if missing. (Nozzle shields have been removed from picture for clarity)

### CONNECTING:

1. Push nozzle over the lugs on the filler valve and turn barrel quarter turn clockwise to lock. Do not squeeze lever before nozzle is connected. **FROM THIS MOMENT ONWARDS ENSURE HANDS ARE AWAY FROM THE NOZZLE BARREL**

1



2



3



2. Pull back lever and latch into place. Ensure lever is latched securely. Follow instructions on dispenser to commence dispensing.

### DISCONNECTING

**ENSURE HANDS ARE AWAY FROM THE NOZZLE BARREL**

3. When dispensing has ended, squeeze back lever and release latch. Release lever fully. A small release of gas will occur as you release the lever. This is normal! Do not place hands on barrel until after the gas has released.
4. Turn barrel anti clockwise quarter turn to release nozzle from vehicle. Replace nozzle in holder on dispenser.

## DE VISSER™ NOZZLE FILLING INSTRUCTIONS.

Ensure **De Visser™** nozzles are fitted with Protective Nozzle shields. Report to site staff if missing. (Nozzle shields have been removed for picture clarity)

### CONNECTING:

1. Hold the hose behind the nozzle and the guard, keeping lever pushed forward with the handle at 12 O'clock position. Locate the nozzle over the lugs on the filler valve and turn the lever quarter turn clockwise to lock. **FROM THIS MOMENT ONWARDS ENSURE HANDS ARE AWAY FROM THE NOZZLE BARREL.**

1



2



3



2. Pull back lever towards hose and latch into place. Ensure lever is latched securely. Follow instructions on dispenser to commence dispensing.

### DISCONNECTING:

**ENSURE HANDS ARE AWAY FROM THE NOZZLE BARREL**

3. Hold hose behind guard and release lever by pushing forward. A small release of gas will occur as you release the lever. This is normal!
4. Turn lever anti clockwise quarter turn to release nozzle from vehicle. Replace nozzle in holder on dispenser.

# Autogas

Brought to you by Calor & Shell